


Telnet IP Configuration

Configuring a Telnet IP Connection

1. Connect the SW-41Plus to the network or with a crossover cable.
See page 9 for more information.
2. Open a Telnet client application of your choice (Putty recommended) on a computer.
3. Enter the IP address or host name of your SW-41Plus.
See page 10 for more information.
4. Once connected you will receive a welcome message.

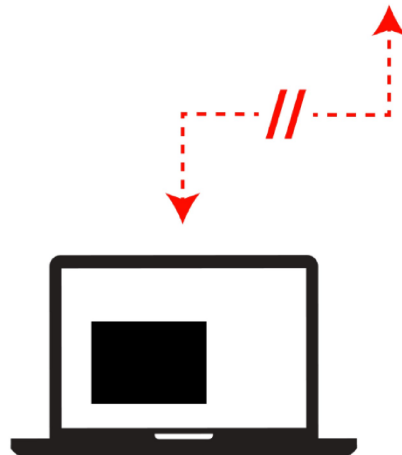

Telnet IP Commands

Command	Syntax	Description
Help	SW41-xxxx help	Shows a list of available commands.
Uptime	SW41-xxxx uptime	Shows elapsed time.
Version	SW41-xxxx version	Shows product name, firmware release, version, build date and serial number.
Device Status	SW41-xxxx st	Shows connected monitors and sources.
Input Select	SW41-xxxx insel <1/2/3/4>	Lets you change the input.
Null Modem	SW41-xxxx null <on/off>	Enables RS-232 null modem
Volume Up	SW41-xxxx vol+	Increases the volume of the RCA output.
Volume Down	SW41-xxxx vol-	Decreases the volume of the RCA output.
Set Volume	SW41-xxxx vol <0-100>	Sets the volume of the RCA output.
Mute Toggle	SW41-xxxx mutetogg	Enable/Disable mute of the RCA output.
Power	SW41-xxxx pwr <on/off>	Powers the device on or off.

To address a single unit, replace “xxxx” with the serial number located on the bottom of your unit.

To address a cluster of SW-41Plus units use only “xxxx” without serial numbers.

Note:

These commands can be combined like so: “SW41-xxxx st uptime version”

Powering Device Command Example:

- To power ON the SW-41Plus use command: SW41-xxxx pwr on \n
- To power OFF the SW-41Plus use command: SW41-xxxx pwr off \n