

HXL Series Firmware Update

Version 2.1.2

1. Download firmware.
2. Retrieve the IP address of your unit by following the steps below:
 1. On the front panel of your unit, press the menu button.
 2. Navigate to the "Network" submenu using the up/down buttons.
 3. Press the menu button while "View IP address" is selected.
 4. The IP address will be shown below.
3. Launch a web browser. Use the latest version of Firefox for best compatibility.
4. Type the IP address of the unit in the address bar.
5. A login page will be displayed.
6. Enter "admin" for username, "Zigen" for password, and hit Submit.
7. On the top right, press the Admin header.
8. Select browse to navigate and select the downloaded firmware file.
9. Press Install Firmware.
10. A progress bar will appear and show upload transfer process.

Once the transfer is complete the unit will reset itself and execute the update.